



COYOTE ACCELERATOR PEDAL MOUNT

**1992-1996 FORD
FAT FENDER GARAGE**



INTRODUCTION

Thank you for purchasing our 1992-1996 Ford Truck Coyote Accelerator Pedal Mount!

WHAT COMES IN THE BOX

- 1 - Pedal Bracket
- 1 - Nut Plate
- 1 - Mounting template
- 3 - 5/16"-20 x 1-1/8" Stainless Steel Button Head Hex Drive Screw
- 2 - 1/4"-20 x 3/4" Stainless Steel Button Head Hex Drive Screws
- 2 - 1/4"-20 5/8" Stainless Steel Hex Drive Screws
- 3 - 5/16" Stainless Steel Washers
- 4 - 1/4" Stainless Steel Washers
- 3 - 5/16" Stainless Steel Split Lock Washers
- 4 - 1/4" Stainless Steel Split Lock Washers
- 2 - 1/4" USS Washer

TOOLS NEEDED

- Allen key (for button head screws)
- Power Drill
- Drill bit
- Center punch
- Sharpie or marking pen
- Wrench or socket set
- Screwdriver (optional, depending on your vehicle)



INSTALLATION INSTRUCTIONS

1) PREPARE THE FIREWALL

- a) Locate the three pre-existing holes on the firewall used to mount the pedal.
- b) Clean the threads in each hole to ensure smooth installation of the 5/16-18 bolts.
- c) Verify that the area is free of debris or obstructions before continuing.

2) MOUNT THE BRACKET


- a) Position the mounting plate over the three holes.
- b) Start with the center bolt - this allows the plate to rotate slightly, making it easier to align and access the other bolts.
- c) Insert and tighten the remaining two bolts evenly to secure the plate in place.





3) INSTALL THE PEDAL ASSEMBLY

- a) Align the nut plate on the back side of the mounting bracket.
- b) Select the appropriate holes on the nut plate based on your pedal type:
 - F-150 pedal (as shown in photos)
 - Mustang pedal (alternate holes)
- c) Attach the pedal to the bracket using the provided hardware, keeping the bolts slightly loose for adjustment.

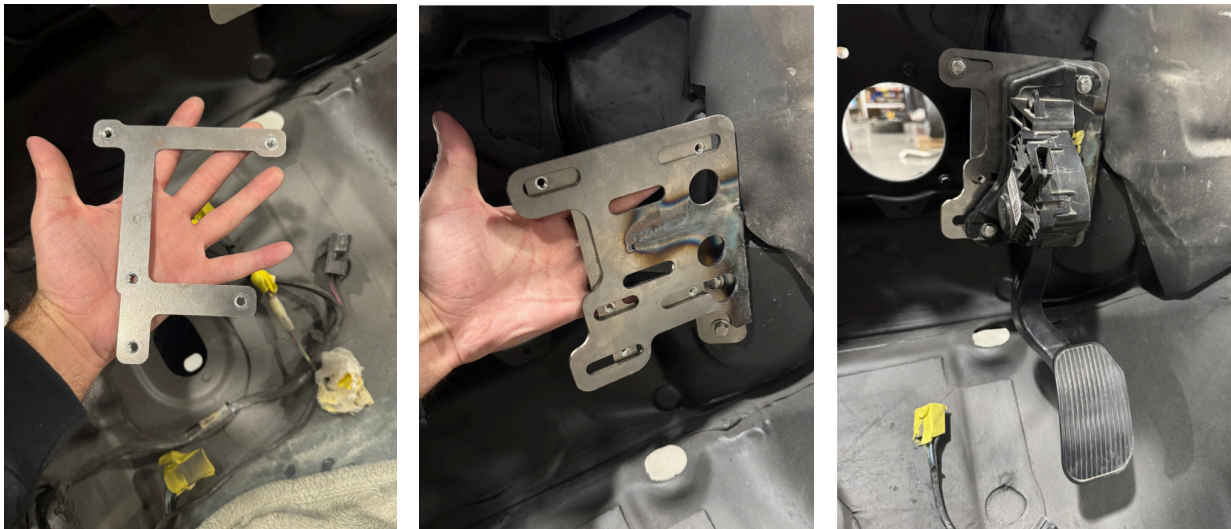

FINAL CHECK

- a) With the nut plate still slightly loose, slide it left or right to find your ideal pedal position.
- b) Sit in the driver's seat and test for comfort and reach with your right foot.
- c) Once satisfied with the placement, fully tighten all pedal bolts.
- d) Verify that the pedal operates smoothly without interference.

YOU'RE DONE!

Enjoy your brand new, reliable Fat Fender Garage 1992-1996 Ford Truck Coyote Accelerator Pedal Mount!

FAT FENDER GARAGE

4160 E Warner Rd STE 101

Gilbert, AZ 85296

480.621.6072

fatfender.com