




**COYOTE
SWAP**

FAT FENDER GARAGE

**VEHICLE
CUSTOMISATION SHOP**

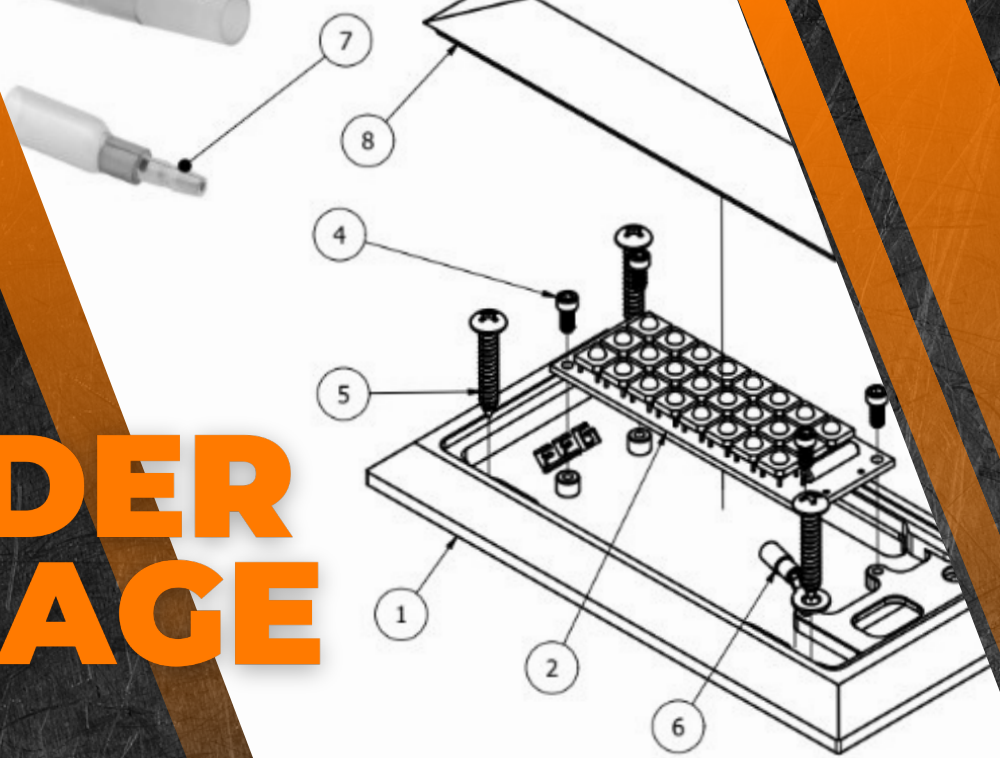

Truck Dome Light

PARTS LIST	
	PART NUMBER
Truck Dome Light Bezel	
12V	
Light Lens	

ASSEMBLY SPECS

WOOD BED FUEL DOOR



Contact US
480 - 621 - 6072



www.fatfender.com

2



1

*A compact, right angle drill is the easiest tool to use when pilot drilling the 4 holes you will need for installation. If you skip pre-drilling, you risk splitting your bed wood.



1

2

Wood Bed Fuel Door


PARTS LIST

ITEM	QTY	PART NUMBER
1	1	Bed Fuel Door Assembly
2	4	#6 x 3/4" Wood Screws

2



1

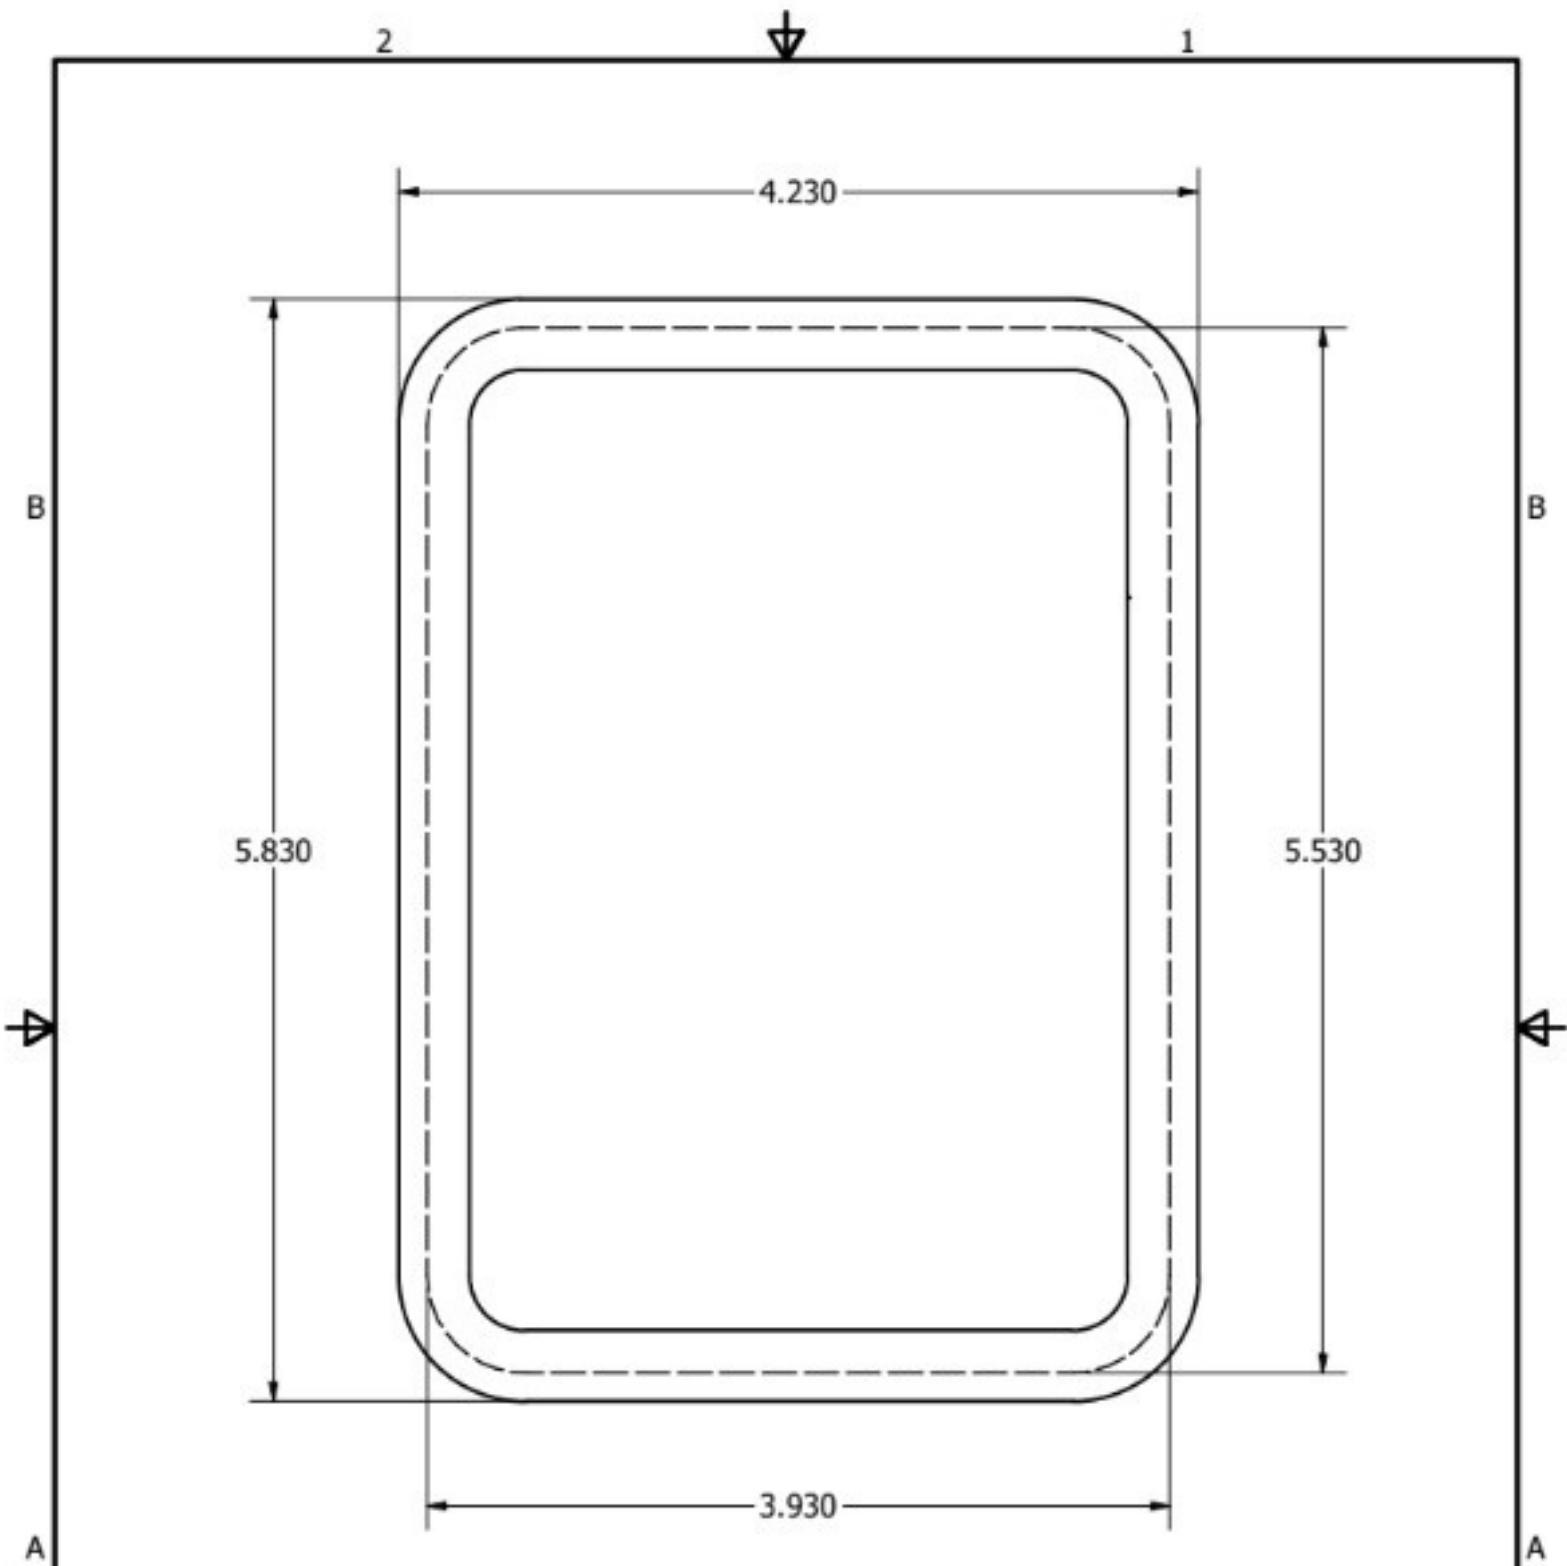

The outermost, solid line is the perimeter of the bezel which will be visible in your truck bed. The dashed line represents the hole that will need to be cut for installation.